

External RS232 converter board
with external oscillator
and JTAG connector
vcc5 = 5v
vcc = 3.3v

